


## 5. BATTERY TOOL USE AND CARE

- a) **Recharge only with the charger specified by the manufacturer.** A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- b) **Use power tools only with specifically designated battery packs.** Use of any other battery packs may create a risk of injury and fire.
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** Liquid ejected from the battery may cause irritation or burns.

## 6. SERVICE


- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

 **WARNING! Some dust created by power sanding, sawing, grinding, drilling and other construction activities contains chemicals known to cause cancer, birth defects or other reproductive harm.** Some examples of these chemicals are:

- 1) Lead from lead-based paints;
  - 2) Crystalline silica from bricks and cement and other masonry products and
  - 3) Arsenic and chromium from chemically-treated lumber.
- Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

## ADDITIONAL SAFETY INSTRUCTIONS FOR YOUR CORDLESS DRILL

1. Battery leakage may occur under extreme usage or temperature conditions. If the fluid comes into contact with the eyes, flush with water for several minutes and contact a doctor immediately.
2. Never burn batteries, they can explode in a fire.
3. Do not charge a leaking battery.
4. Use of an attachment and charger not recommended or sold by the drill manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. Before drilling into a wall, in case of doubt check with a metal-/voltage detector that you are not breaking into electricity, gas or water supply lines.
6. Before you lay down the drill, make sure that all moving parts have come to a stop.
7. Avoid frequent stalling when drilling, as this could damage the batteries.
8. Only connect the charging device to an AC supply.
9. Charge battery only with the appropriate charging device.
10. The charging device and the drill must be protected from moisture!
11. Do not use the charging device outdoors.
12. Always charge the battery pack between temperatures 36°F to 95°F (2°C to 35°C). Ideal charging temperature is 65°F to 84°F (18°C to 29°C).
13. Do not short out the contacts of battery or charger.
14. Respect the polarity "+/-" when charging.
15. Save these instructions. Refer to them frequently and use them to instruct others who may use this tool. If someone borrows this tool, make sure they have these instructions.
16. **Use auxiliary handles supplied with the tool.** Loss of control can cause personal injury.
17. **Wear ear protection with cordless drill.** Exposure to noise can cause hearing loss.
18. **Hold power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring.** Fasteners contacting a "live" wire may make exposed metal parts of the power tool live and could give the operator an electric shock.

 **WARNING: If a small amount of electrolyte should leak from the battery pack under extremes of temperature or after heavy use, then wash off immediately from your skin and hands**